



ColdTraq™ module

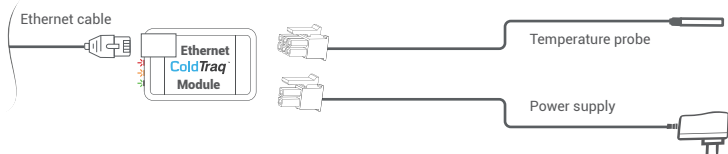

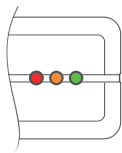















Quick Installation Guide



 
Module status LEDs





The module LED status lights apply to both the WiFi and Ethernet modules.

-    1. Power-up: all the LEDs are on (allow 30 sec delay)
-    2. Initializing network: yellow LED is flashing. Module connection successful.
-    3. Initializing cloud: green LED is flashing. AP/Router connection successful.
-    4. Status OK: green LED is on. Complete connection successful.
-    Probe error: red LED is on
-    Internet connection error: yellow LED is on

Ethernet status LEDs



-  Ethernet cable connected:
 - the amber LED is flickering
-  Ethernet cable disconnected:
 - the green and amber LEDs are on

Watch the installation video:



<http://freshqlock.com/coldtraq>